

UEC DSD4121/RV
& DSR4639
Replacement RCU
Button Guide



Note: If you use your old remote control prior to using this remote control on your device, this remote control will not operate your device. Please reset your device and only use this remote control with your device.

Button Name	Button Identification	Function
STANDBY		Switches the set top box between On and STANDBY.
0-9 Digits		Numerical data entry of channel number, PIN, etc.
INFO		Launches I-plate & extended I-plate for program information.
TV/RADIO		Selects between TV and Radio services if pressed.
PVR		Launches the PVR Menu. From here you can access the Playlist, Scheduled List, Timeshift List and Other Media.
GUIDE		Launches Electronic Program Guide (EPG).
Navigation Arrows (4) and OK		Menu navigation and selection buttons.
MENU		Launches Main Menu.
EXIT		Leaving a Menu or Function.
VOLUME UP/DOWN		Adjusts volume up and down.
MUTE		Turns the sound ON/OFF.
BACK		Goes back to previous channel.
CHANNEL UP/DOWN		Allows channel up and down navigation.
4 COLOURED BUTTONS		Functions as required by application as indicated on the onscreen display.
REW/JUMP BACK		Press to rewind a recorded program or a timeshift program. Press and hold to jump back.
Play/Pause		Starts playback of recorded program or resumes playback of paused live TV program (on Timeshift) and pauses live TV (when on Timeshift) or recorded programs.
FAST FORWARDS/JUMP FORWARDS		Press to fast forward a recorded program or a timeshift program. Press and hold to jump forward.
STOP		Stops playback of the recorded program.
RECORD		Records selected program/stops current recording.
Subtitles/Closed Captions		Turns ON/OFF subtitles and closed captions (available only to programs that contain subtitle/closed caption information).
HELP		Launches the Help Information